


PLC-CAN SLAVE DEVICE (using PLC-Micro)

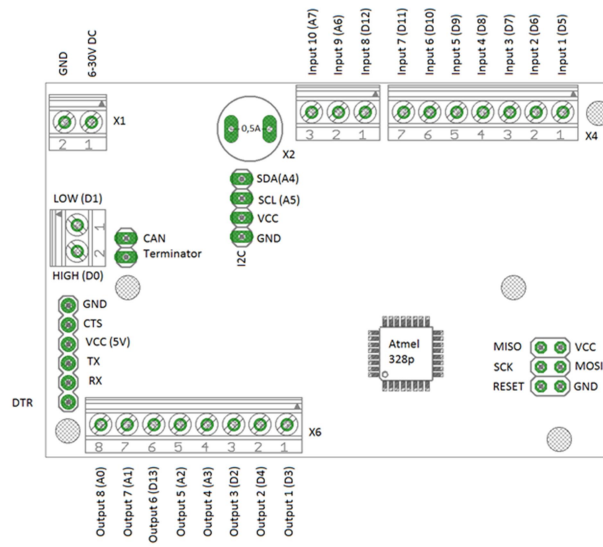

| Address | Input 9 | Input 10 |
|---------|---------|----------|
| 1 | ○ | ○ |
| 2 | ○ | ● |
| 3 | ● | ○ |
| 4 | ● | ● |

1) Message from master to slave: “{S;x;O;y}”

2) Message from slave: “{S;x;I;y}”

S - Slave

I - Input

O - Output

x - Slave address 1-4

y - outputs value in byte

Slave module Firmware, example code and more info:

<http://www.plc-expert.com/product/micro-plc/>